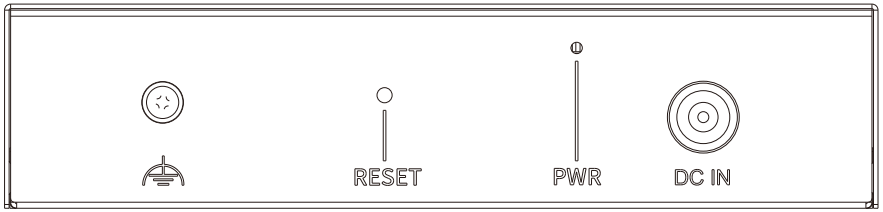

PoE Watchdog
Extend Mode
Only work when Managed Mode off
Link/Act
PoE
Link/Act
Link/Act
SYS
ON
OFF
Managed
Mode
1
2
3
4
5 (Uplink)
6 (Uplink)
Port 1-4:10/100Mbps (PoE) Port 5-6:10/100/1000Mbps


RESET
PWR
DC IN