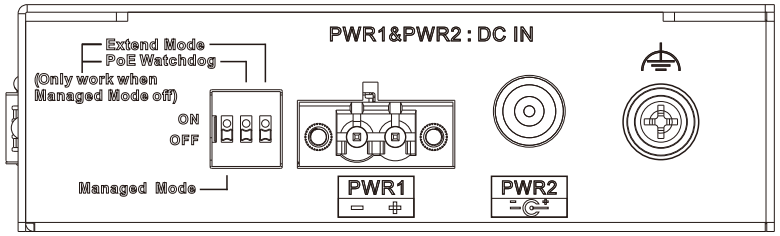

Port 1-4:10/100/1000Mbps (PoE)
Port 5:10/100/1000Mbps
Port 6:1000Mbps
RESET
PWR
6
1
2
3
4
5 (Uplink)
6 (Uplink)


PWR1&PWR2 : DC IN
Extend Mode
PoE Watchdog
(Only work when
Managed Mode off)
ON
OFF
Managed Mode
PWR1
PWR2